



Standard configuration: Mono-52 table on right hand side.
To switch to a left hand side table, please follow the following steps;

